
ZX-HM SERIES

POSITION TRANSDUCER

INSTALLATION GUIDE

DIMENSIONAL INFORMATION

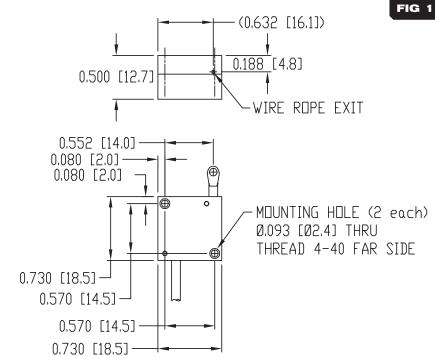

SPECIFICATIONS

| ١ | Excitation Voltage 5.00 ± 0.25 VDC |
|---|---|
| ı | Excitation Current |
| ı | Output Voltage89% ± 3% of Excitation Voltage |
| | Minimum Load Impedance30K Ohms |
| ı | Resolution |
| ı | Linearity±1.0% Full Scale |
| ı | Repeatability±0.0032 in (0.08 mm) |
| ı | Dynamic Response25 Hz over full range extension |
| ı | Operating Temperature40° C to 100° C |
| ı | Vibration |
| ı | Shock 50 G's 0.1 ms max |

MOUNTING


■ ZX-HM may be mounted using two #2 or two 2 mm screws through transducer, or unit may be mounted with two 4-40 screws that thread directly into the housing. (See FIG. 1)

2 To maximize wire rope life, align transducer with moving element so that wire rope exits perpendicular to axis of wire rope exit hole within 2° (See FIG 2).


CABLE TO CABLE CONNECTOR


IF ORDERED THIS CONNECTOR IS ATTACHED BY


MANUFACTURER

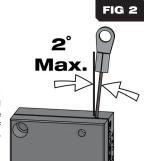

Dimensions in brackets are millimeters.

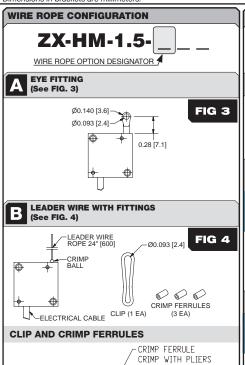

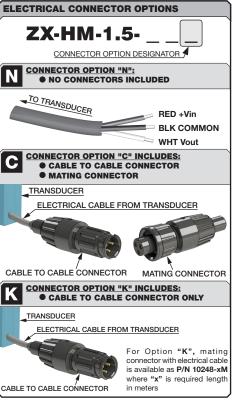

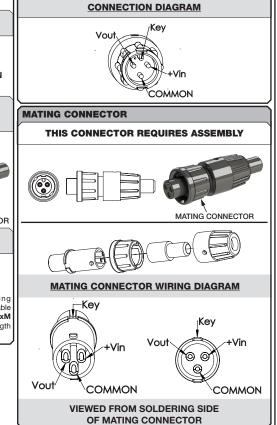



CUT HEE EXCESS

WIRE ROPE WITH PLIERS

CLIP

4175 SW Research Way, Corvallis, Oregon, 97333 Tel: (541) 757-3158 Fax (541) 757-0858